

CONTROLS

REVERB [dual knob] - Controls the mix of reverberated signal.

TONE [dual knob] - Controls the brightness or darkness of the trails.

FEEDBACK - Controls the length of the trails.

DUAL KNOBS

The preset footswitch toggles between the upper and lower knob settings.

RED = UPPER
BLUE = LOWER

OSCILLATION

Holding down the bypass footswitch will send the pedal into an infinite oscillation that lasts as long as the bypass switch is held. Oscillation ramp time varies with reverb level. Best above noon.

