

N_4

HOW TO PROGRAM LOOPS:

1. Hold switch to be programmed until LED's blink in wave pattern
2. Select what loops you want to activate
3. Select what bank to save it to
4. Hold switch again to save until LED's blink in wave pattern

Note: Preset LED will blink while in programming mode


WHAT THE SWITCHES DO:

- LEFT Loop 1
- LEFT + MIDDLE Loop 2
- MIDDLE Loop 3
- MIDDLE + RIGHT Loop 4
- RIGHT Bank

MUTING CIRCUITRY


This looper contains muting circuitry to reduce noise when engaging loops. The muting circuitry can be bypassed by holding the bank switch during power up. Red LED blink = Active, Blue LED blink = Disabled.

NOTE: Center negative, 9V power only. We recommend an isolated power supply.

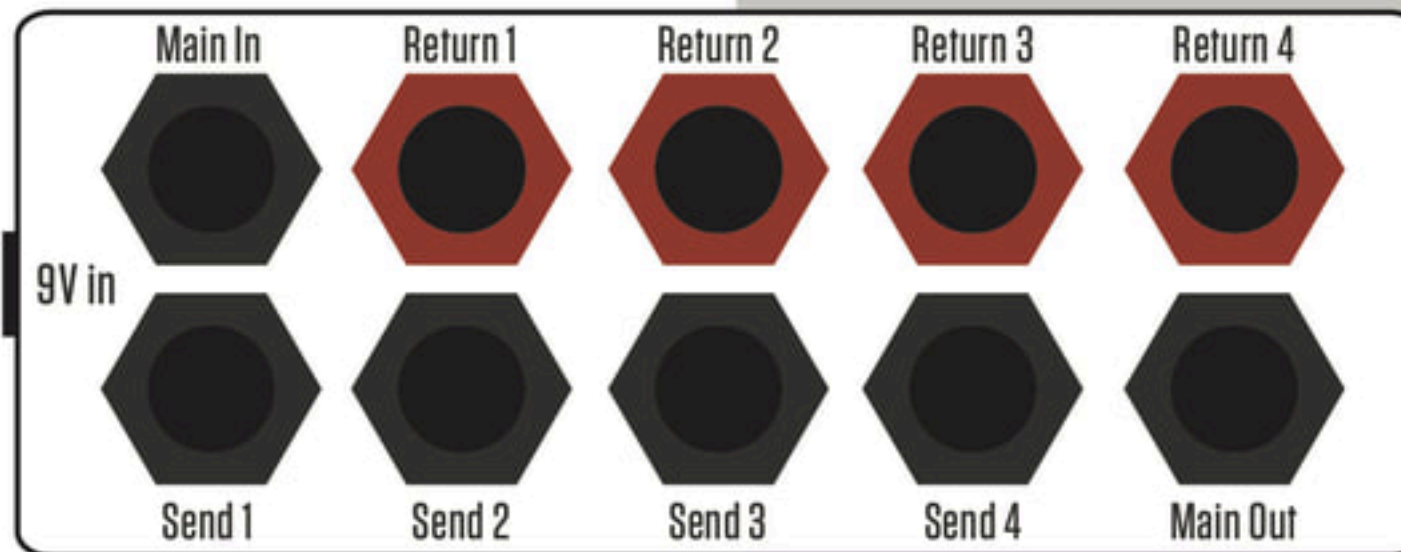

SWITCHABLE BUFFER

This looper contains a switchable buffer before all loops. This buffer can be bypassed by flipping the toggle switch.

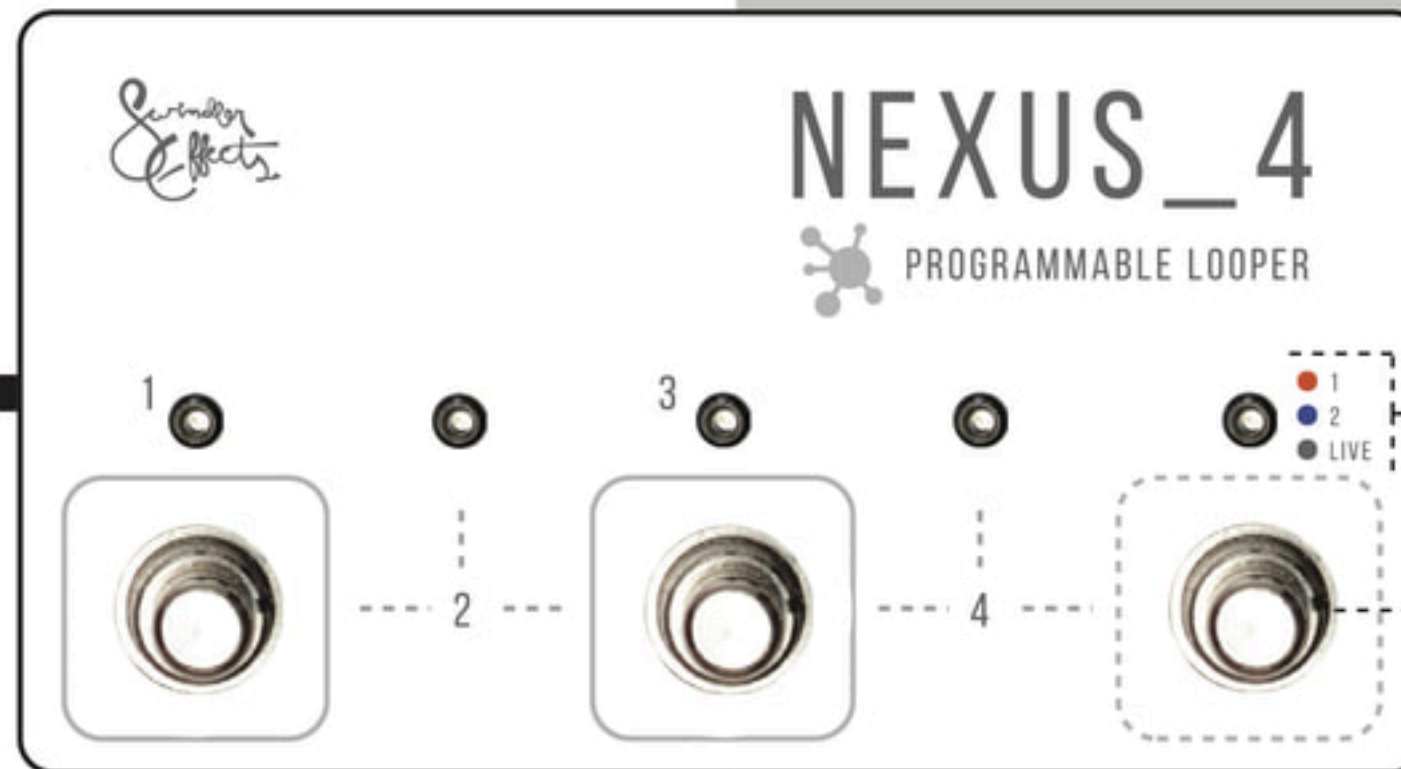

MODES

- Bank 1 4 Presets
- Bank 2 4 Presets
- Live 4 Live Loops

GLOBAL BYPASS

Holding the bank footswitch will bypass all loops



THE NEXUS_4 is a programmable effects looper. It only does a few things. It does those things very well. This is a manual that details those things.